




Retainer Replacement Instructions

202220109


BEFORE YOU BEGIN

You will need a few tools to help with your retainer replacement.

Recommended Tools

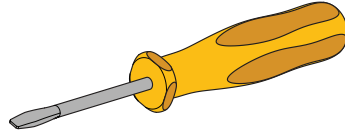

Flat head screwdriver

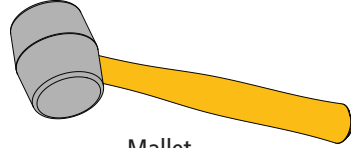


Mallet

1 REMOVE TOP AND BOTTOM RETAINERS


Using a wide flat head screwdriver, remove both the top and bottom retainers by prying between the retainers and masterframe every 6-inches.

Pro Tip: Wrap a thin layer of tape around the tip of the screwdriver to help prevent scratches.

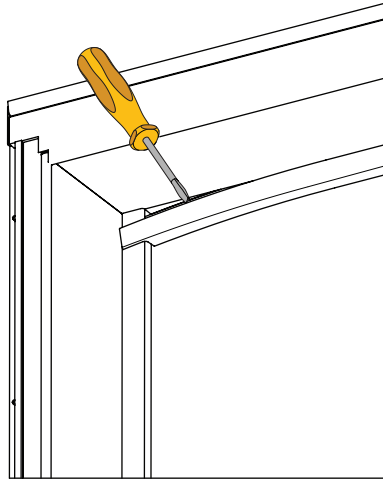


2 REMOVE SIDE RETAINERS

Using your flat head screwdriver, remove both side retainers by prying between the retainers and masterframe every 6-inches.

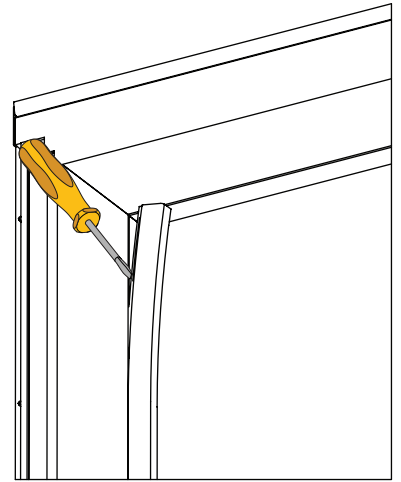


3 INSTALL NEW SIDE RETAINERS

Insert barbed portion of the retainer leg into the masterframe's channel and lightly tap the exposed retainer with a mallet every 6-inches over the entire length of the retainer.

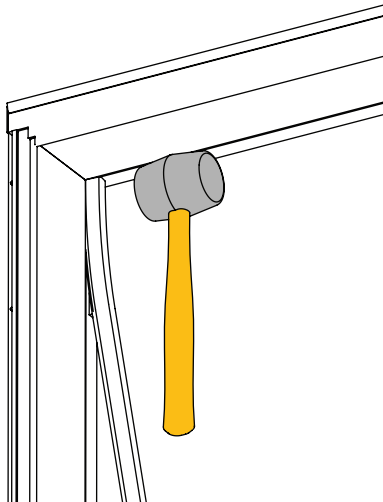

4 INSTALL NEW TOP AND BOTTOM RETAINERS

Insert barbed portion of the retainer leg into the masterframe's channel and lightly tap the exposed retainer with a mallet every 6-inches over the entire length of the retainer. Center as needed. The ends are notched to overlap the side covers.

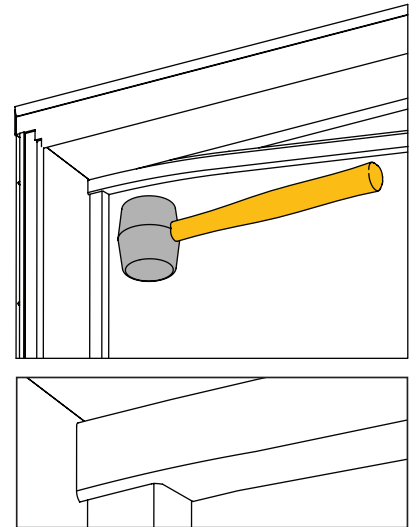

For any questions, or additional support,
CONTACT OUR CUSTOMER CARE TEAM
at LARSONdoors.com or 888-483-3768