

 


Platinum RS - Glass & Screen Kit Replacement Instructions


202221043

Note: Two people are recommended. Please carefully read through all steps before starting. Some images are shown away from the door to improve clarity.


Recommended Tools



Phillips
Screwdriver

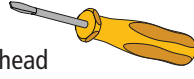

Small Flathead
Screwdriver

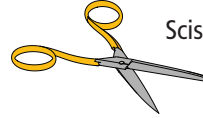


Scissors

Block of Wood



1 REMOVE BOTTOM GLASS INTERLOCK

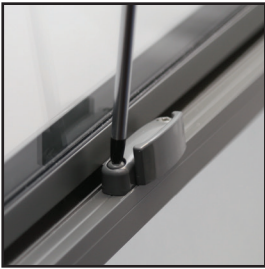

a. Remove sash lock and (2) screws.




b. Remove (2) interlock anchors and (2) screws.



c. Rotate interlock extrusion towards you to disconnect.

2 REMOVE GLASS INSERT SLIDER SPACERS

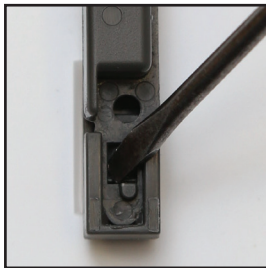

The slider spacers are located under the top operating glass insert and visible from the outside of the door. Lower the top glass 4-6" for improved visibility.

- a.** Push on the flat area of the spacer with small flat screwdriver and slightly twist downward. Hold onto spacer and remove.
- b.** Repeat for other side.

3 LOWER THE TOP GLASS INSERT & CUT SCREEN




- a.** Slowly lower the top glass insert all the way down.
- b.** Using scissors, cut along the entire width of the screen to disconnect it from the top glass insert.

NOTE: The screen is under tension and will retract rapidly.


For any questions, or additional support,
CONTACT OUR CUSTOMER CARE TEAM
at LARSONdoors.com or 888-483-3768

4**REMOVE HEAD COVER**

Remove (2) screws from head cover and pull head cover towards you to remove.

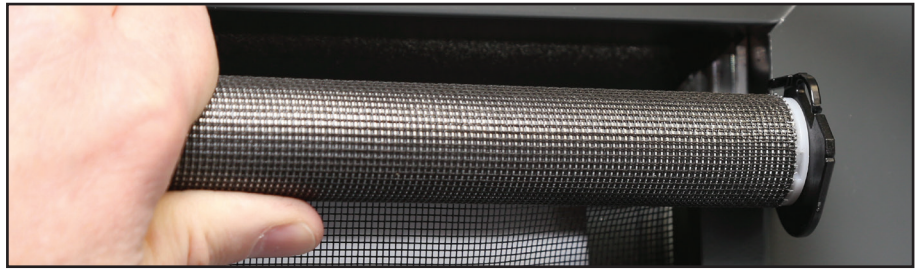5**REMOVE SCREEN ROLL AND PLASTIC BRACKETS**

Remove the screen and all brackets starting on the right side. Pull downwards until it clears the door frame.

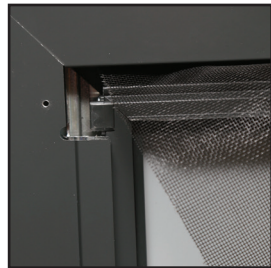6**REMOVE TOP GLASS INSERT****STOP**

Once the glass insert is removed, rest the glass insert on a block of wood or stable surface near the door to prevent damage to the sash spacer receiver on the bottom of the glass insert.


NOTE: The plastic corner spacers on the glass insert must be raised far enough to clear the sash spacer receiver on the bottom of the glass insert.

a. Slide the glass insert completely to the top and push it towards the handle side of the door. Remove it from the door starting from the opposite side.

b. If replacing the screen only, the glass insert will be reused.

c. Inspect plastic components and screws on the glass insert. If necessary, replace with the extra parts included in the kit.

Tip: The screen remnant can be pushed to the outside making more room for the glass insert during this step.

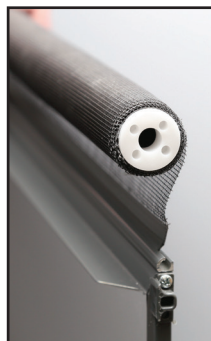
7**ATTACH NEW SCREEN TO TOP GLASS INSERT**

NOTE: The spring in the new screen roll is pre-tensioned. **DO NOT** touch the tab on the screen or tension could be lost.


Remove screen from glass by sliding it out of the channel and slide new screen roll into the channel on the new glass. If only replacing the screen, slide the new screen roll into the channel on the original glass.

a. Make sure fabric comes off the front (outside) of the roll. Center screen in channel.

b. Screen may be rested on the glass lift until you are ready to install it into the door.



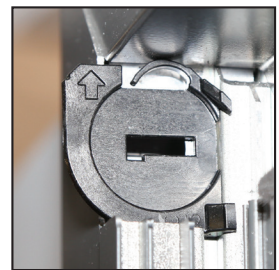
8**REINSTALL LEFT SCREEN BRACKET**

Reinstall left screen bracket (bracket with the slot in the center). The arrow on the bracket will point up and be visible after installation.

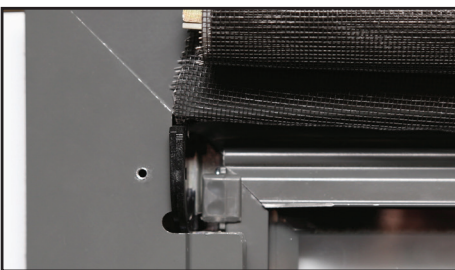9**INSTALL TOP GLASS INSERT**

a. With the glass insert raised up so the top corner sliders are in the screen roll opening, insert the handle side of the glass insert into its track, then rotate the glass insert until the opposite side is in place.

b. Slowly lower the top glass insert out of the screen roll area, being careful not to tear the screen.

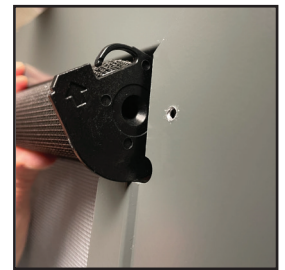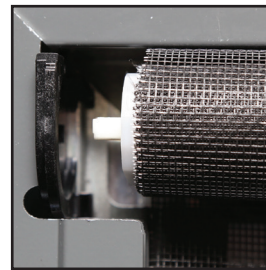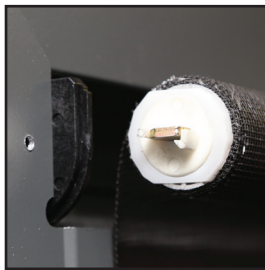10**INSTALL NEW SCREEN ROLL & BRACKETS**

a. Insert the tab on the left side of the screen roll into the left (slotted) bracket.

NOTE: Do not twist the exposed tab or tension will be lost, instead rotate the entire screen roll to align. Do not leave more than 6" of screen between the screen roll and the top glass insert or the operation of the glass insert may be affected. **Do not operate glass insert until head cover is installed.**

b. With the right side of the screen roll rotated out slightly, insert the plastic pivot bracket into the right end of the screen roll.

c. With the arrow on the bracket pointing up, push the right end of the screen into place.

d. Before lowering the glass insert, make sure the screen fabric is dropping straight down to the glass insert without obstructions.

11 RE-INSTALL HEAD COVER




If needed, replace head cover endcaps and screws and reinstall the head cover.


NOTE: Lip on cover should be at bottom.

12 INSTALL NEW SLIDER SPACERS


Start Position

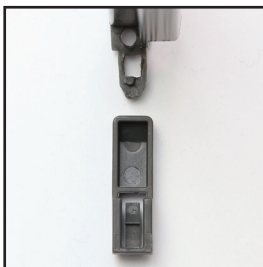

Partially Installed

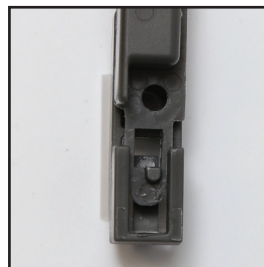

Completed

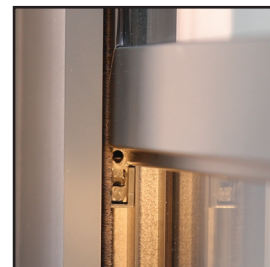


From the exterior side of the door, install the included bottom slider spacers into the bottom corners of the top glass insert by sliding the spacer over the tab until you hear a click. Repeat for other side.
NOTE: Centering the glass insert in the track helps with installation of slider spacers.

13 RE-INSTALL INTERLOCK



a. Inspect components and screws and replace with extra parts included in the kit if necessary.

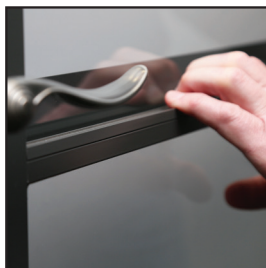

b. Insert and rotate the interlock rail into place. Weatherstrip faces the glass. It will rest flat when installed.



c. Reinstall the interlock anchors (2) that were removed in step 1b into the frame using the existing holes.



d. Reinstall the sash lock that was removed in step 1a using the existing holes.

14 TEST OPERATION



Slide the glass insert up and down, making sure the screen is fully supporting the glass insert and the sash lock is working properly.

TROUBLESHOOTING:

LOSS OF TENSION

The spring comes pre-wound from the factory. Do not complete the following steps unless tension has been lost.

If the spring setting is disturbed or "set off":

Grip the exposed tab on the side of the screen roll with a pair of vise-grips. Hold in the position shown and turn the tab clock-wise for the number of revolutions shown below:

- 32" Door = 21 Revolutions
- 36" Door = 24 Revolutions

Once the revolutions are complete, slowly back-off a half turn and tilt the screen roll until the spring locks in place. (Do not release the tab until you feel that the tab is locked in place. If done correctly, the spring will not unwind).

