


LOCKING COVER

Slide locking cover into guide channels located on both sides of inner frame. Pull spring-loaded knob toward you, slide locking cover all the way down and release knob into recessed groove at top of inner frame.

CAUTION: Never lift locking cover by spring loaded knob.

TRAINING YOUR PET TO USE THE PET DOOR

1. After installation, place yourself on one side of the pet door and your pet on the other side.
2. Hold or tape flap in the open position.
3. Call or entice pet through door opening. Be patient; forcing your pet will prolong training.
4. Repeat process from opposite side of pet door.
5. Leave flap in closed position, lift and hold corner of flap just enough for pet to realize an opening exists. Call or entice pet through door.
6. Reward and praise your pet after each successful attempt. This will reinforce use as well as accelerate training time.

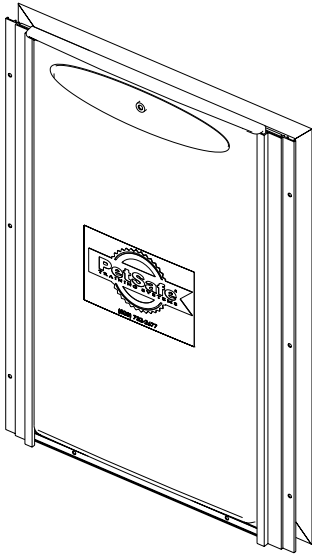

For purposes of clarity, flap is not shown in above illustration.