



Kickpanel Replacement Instructions

202220855

For Tradewinds, Lakeview, and Easy Vent® 146 Midview Models

- 1** Remove screws from the clear sash wedges and remove wedges from the door by prying them out with a flat blade screwdriver. Lift and slide the sash towards one side of the opening and remove it from the door.




- 2** Lift the mullion evenly towards the center of the door. Lower one side slightly to hold in place and leave it in the door.



- 3** Lift the kickpanel towards the center of the door. Slide towards the hinge side, apply pressure from the outside on the handle side of the door and remove towards the inside.



- 4** Reinstall the new kickpanel from the inside by starting in the middle of the opening. Note: smaller side faces outside and flat edge is the top.

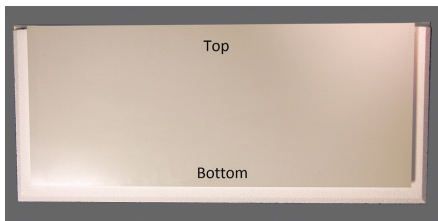

- 5** Slide to the hinge side and apply pressure to the handle side to fully seat it into the track.

- 6** Lower the kickpanel until it is fully seated on the lower sill. Then, lower the mullion on top of the kick panel.

- 7** Reinstall glass and wedges. Be sure the bottom insert seats in the bottom channel when fully lowered. Screw the wedges back into place. If the holes do not line up, the bottom insert is not seated correctly. Raise it up and lower it into place again. If the insert will not seat, apply a small amount of pressure with your foot.

