



## SASH WEDGE REPLACEMENT INSTRUCTIONS

FIGURE 1



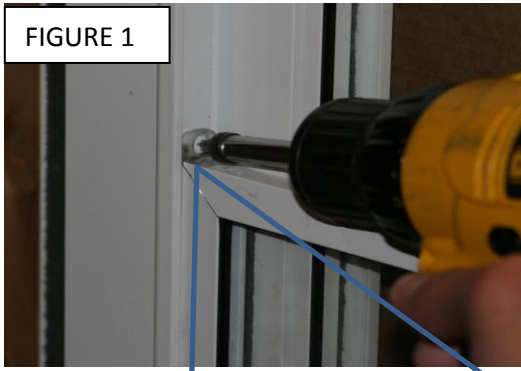


FIGURE 2

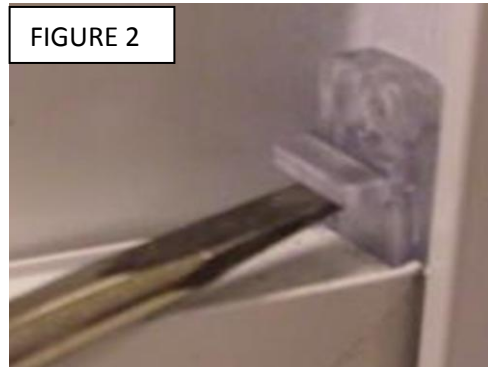

REMOVE THE SCREWS FROM EACH CLEAR SASH WEDGE, LOCATED ON BOTH SIDES OF THE BOTTOM SASH AT THE TOP AS SHOWN IN FIGURE 1. REMOVE THE WEDGES FROM THE DOOR BY PRYING THEM OUT WITH A FLAT BLADED SCREWDRIVER AS SHOWN IN FIGURE 2.

FIGURE 3

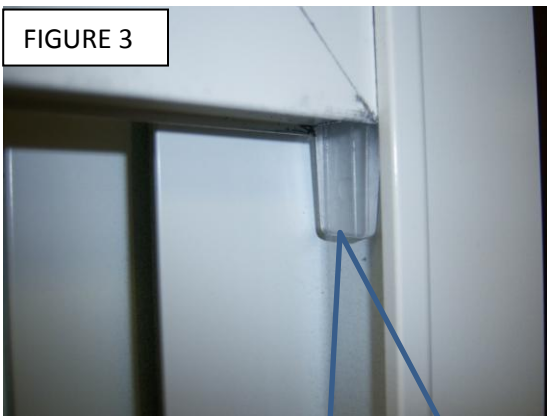

IF THE CLEAR WEDGES WERE BROKEN OFF AND UNABLE TO BE REMOVED FROM THE TOP OF THE SASH, LIFT THE SASH UP 18" OR MORE AND MOVE IT SIDE TO SIDE. THIS WILL CAUSE THE PIECE OF THE BROKEN WEDGE TO SETTLE TO THE BOTTOM. PULL IT OUT OF THE SASH AND DISCARD IT. REPEAT FOR OTHER SIDE OF SASH IF NECESSARY.

INSTALL BOTTOM SASH PER FIGURES 5 & 6. IT IS VERY IMPORTANT THAT THE SASH IS SEATED CORRECTLY TO AVOID THE SITUATION SHOWN IN FIGURE 4.

FIGURE 4



IF THE BOTTOM SASH IS NOT SEATED CORRECTLY THE SASH LOCK WILL TYPICALLY NOT ENGAGE BY 1/16" TO 1/8" AS SHOWN ABOVE.

**NOTE:** THE STYLE OF YOUR SASH LOCK MAY BE DIFFERENT THAN THE ONE SHOWN ABOVE. NO MATTER THE STYLE OF YOUR LOCK, THIS PROBLEM CAN STILL OCCUR IF THE BOTTOM SASH IS NOT INSTALLED CORRECTLY.


FIGURE 5



REINSTALL THE BOTTOM SASH INTO THE DOOR. APPROXIMATELY 18" UP FROM THE BOTTOM OF THE DOOR, INSERT THE SASH TOWARDS THE DOOR'S HANDLE SIDE. THEN ROTATE THE OPPOSITE SIDE OF THE SASH INTO PLACE. LOWER THE SASH TO THE BOTTOM, ENSURING THE SASH IS CENTERED LEFT TO RIGHT AND SEATED INSIDE THE BOTTOM SILL.

WHEN LOWERING THE SASH, APPLY A SMALL AMOUNT OF PRESSURE TO THE BOTTOM OF THE SASH WITH YOUR FOOT TO HELP SEAT IT INTO THE BOTTOM SILL CORRECTLY. SEE FIG 6 FOR CORRECT PLACEMENT OF THE SASH.

FIGURE 6

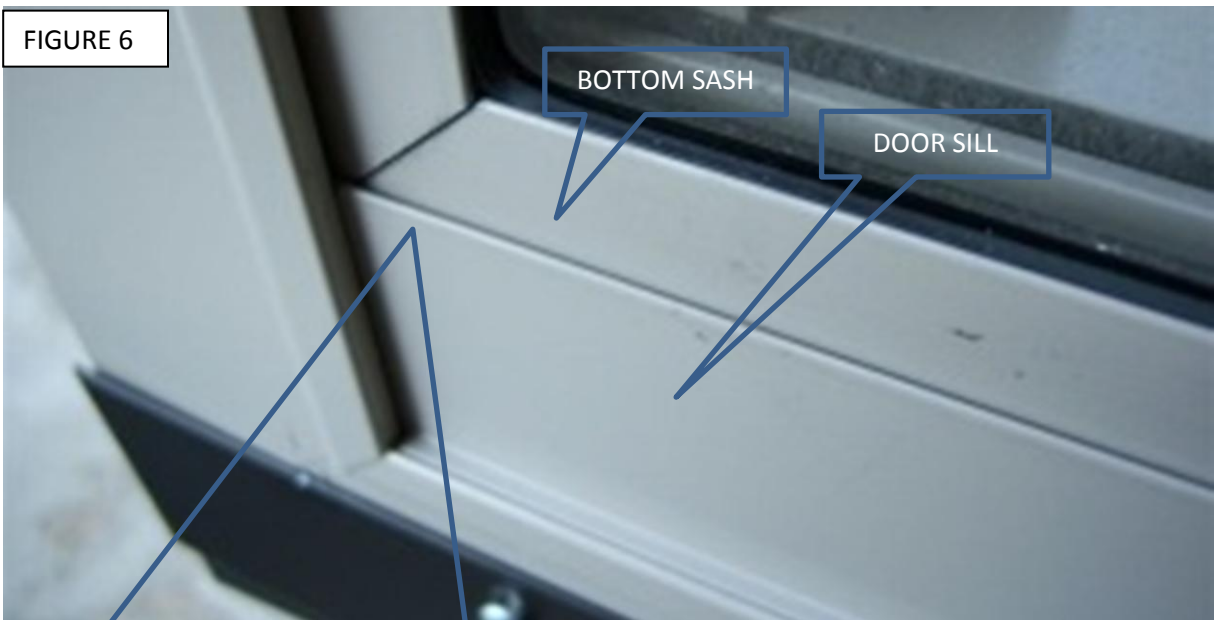

IS VERY IMPORTANT THAT THE SASH IS SEATED CORRECTLY. THE ILLUSTRATION SHOWN ABOVE SHOWS A BOTTOM SASH THAT IS SEATED CORRECTLY. THIS VIEW IS FROM THE INSIDE OF THE DOOR. NOTICE HOW THE BOTTOM SASH IS SEATED INSIDE THE TRACK OF THE DOOR SILL.

IF THE SASH IS SEATED INCORRECTLY THERE MAY NOT BE ENOUGH ROOM FOR THE LOCK TO LATCH.

INSTALL 2 NEW SASH WEDGES AS SHOWN IN FIGURES 1 AND 2 (ONE ON EACH SIDE OF THE BOTTOM SASH). THE WEDGES MAY NEED TO BE TAPPED INTO PLACE. DO NOT USE A POINTED OBJECT OR IT MAY DAMAGE THE WEDGES. THE WEDGES SHOULD BE TIGHT AGAINST THE TOP OF THE INSERT WHEN INSTALLED CORRECTLY. INSTALL A SCREW INTO EACH WEDGE.

IF YOU ARE USING A POWERDRILL BE CAREFULL NOT TO OVERDRIVE THE SCREW AND CRACK THE WEDGE.

NOTE – DO NOT OPERATE THE TOP SASH UNTIL THE WEDGES ARE SCREWED INTO PLACE BECAUSE THE INTERLOCK BETWEEN THE TOP AND BOTTOM GLASS COULD LIFT THE BOTTOM INSERT OUT OF THE DOOR SILL AND CAUSE THE LOCK NOT TO LATCH AGAIN.