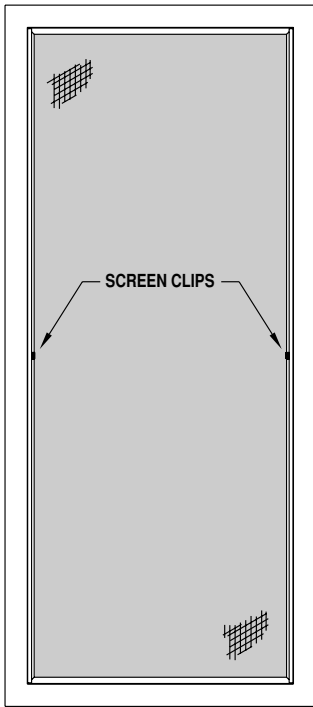


FIGURE A

INTERIOR VIEW OF DOOR

Screen Anti-Bow Clip Installation Instructions

LARSON


NOTE: Anti-bow clips are to be installed over the screen insert—(one clip per side) at the center of the vertical screen frame members (Figure A).

From the INSIDE of the door:

- 1 Remove the vinyl retainer strips that hold screen in place.
- 2 Position screen clip per Figure B.
- 3 Center clip in the middle of the screen frame, mark, then drill a (3/32") pilot hole.
- 4 Fasten clip to door with a (#6 x 3/8") screw provided.
- 5 Install the second clip on the opposite side repeating the first four steps.
- 6 Re-install vinyl retainer strips over the anti-bow screen clips.

* If you have (Model Type A) notch the vinyl retainer per Figure C so that the screen clip screw will not interfere with the retainer installation.

202220560 LM 1/03

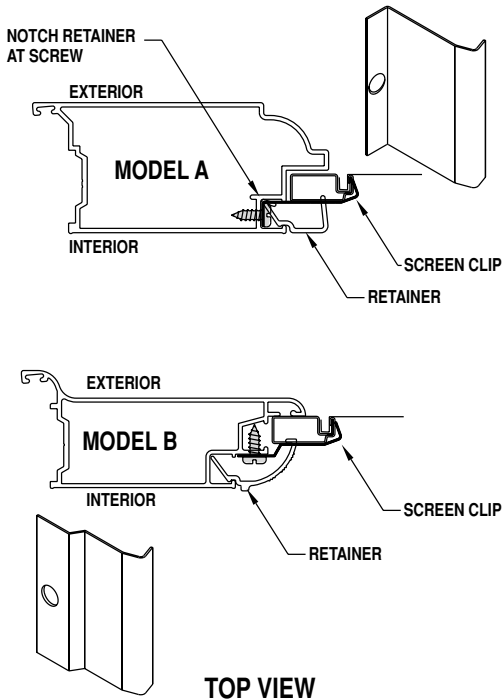FIGURE B**FIGURE C**